


CONNECTOR J1: PACKARD P/N 15357050	
PINOUTS	
PIN	FUNCTION
H	BATTERY + (B+)
G	OUTPUT SPKR 5- (WOOFER-)
F	N/C
E	GROUND (REFERENCE ONLY)
A1	N/C
A2	N/C
A3	MIC+
A4	MIC-
A5	OUTPUT SPKR 3+ (REAR LEFT+)
A6	OUTPUT SPKR 3- (REAR LEFT-)
A7	OUTPUT SPKR 4+ (REAR RIGHT+)
A8	OUTPUT SPKR 4- (REAR RIGHT-)
A9	OUTPUT SPKR 1+ (FRONT LEFT+)
A10	OUTPUT SPKR 1- (FRONT LEFT-)
A11	OUTPUT SPKR 2+ (FRONT RIGHT+)
A12	OUTPUT SPKR 2- (FRONT RIGHT-)
A	POWER GROUND (GND)
B	OUTPUT SPKR 5+ (WOOFER+)
C	N/C
D	N/C
B1	AUDIOPILOT ON/OFF INPUT
B2	EXTERNAL AMP CONTROL OUTPUT
B3	INPUT CH.4- (REAR RIGHT-)
B4	INPUT CH.4+ (REAR RIGHT+)
B5	INPUT CH.3- (REAR LEFT-)
B6	INPUT CH.3+ (REAR LEFT+)
B7	INPUT CH.2- (FRONT RIGHT-)
B8	INPUT CH.2+ (FRONT RIGHT+)
B9	INPUT CH.1- (FRONT LEFT-)
B10	INPUT CH.1+ (FRONT LEFT+)
B11	CONTROL (SWB+)
B12	N/C

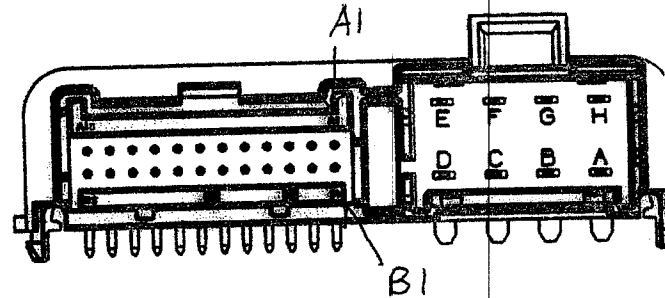

CONNECTOR DETAIL
SCALE 2:1
ROTATED 90° CCW